


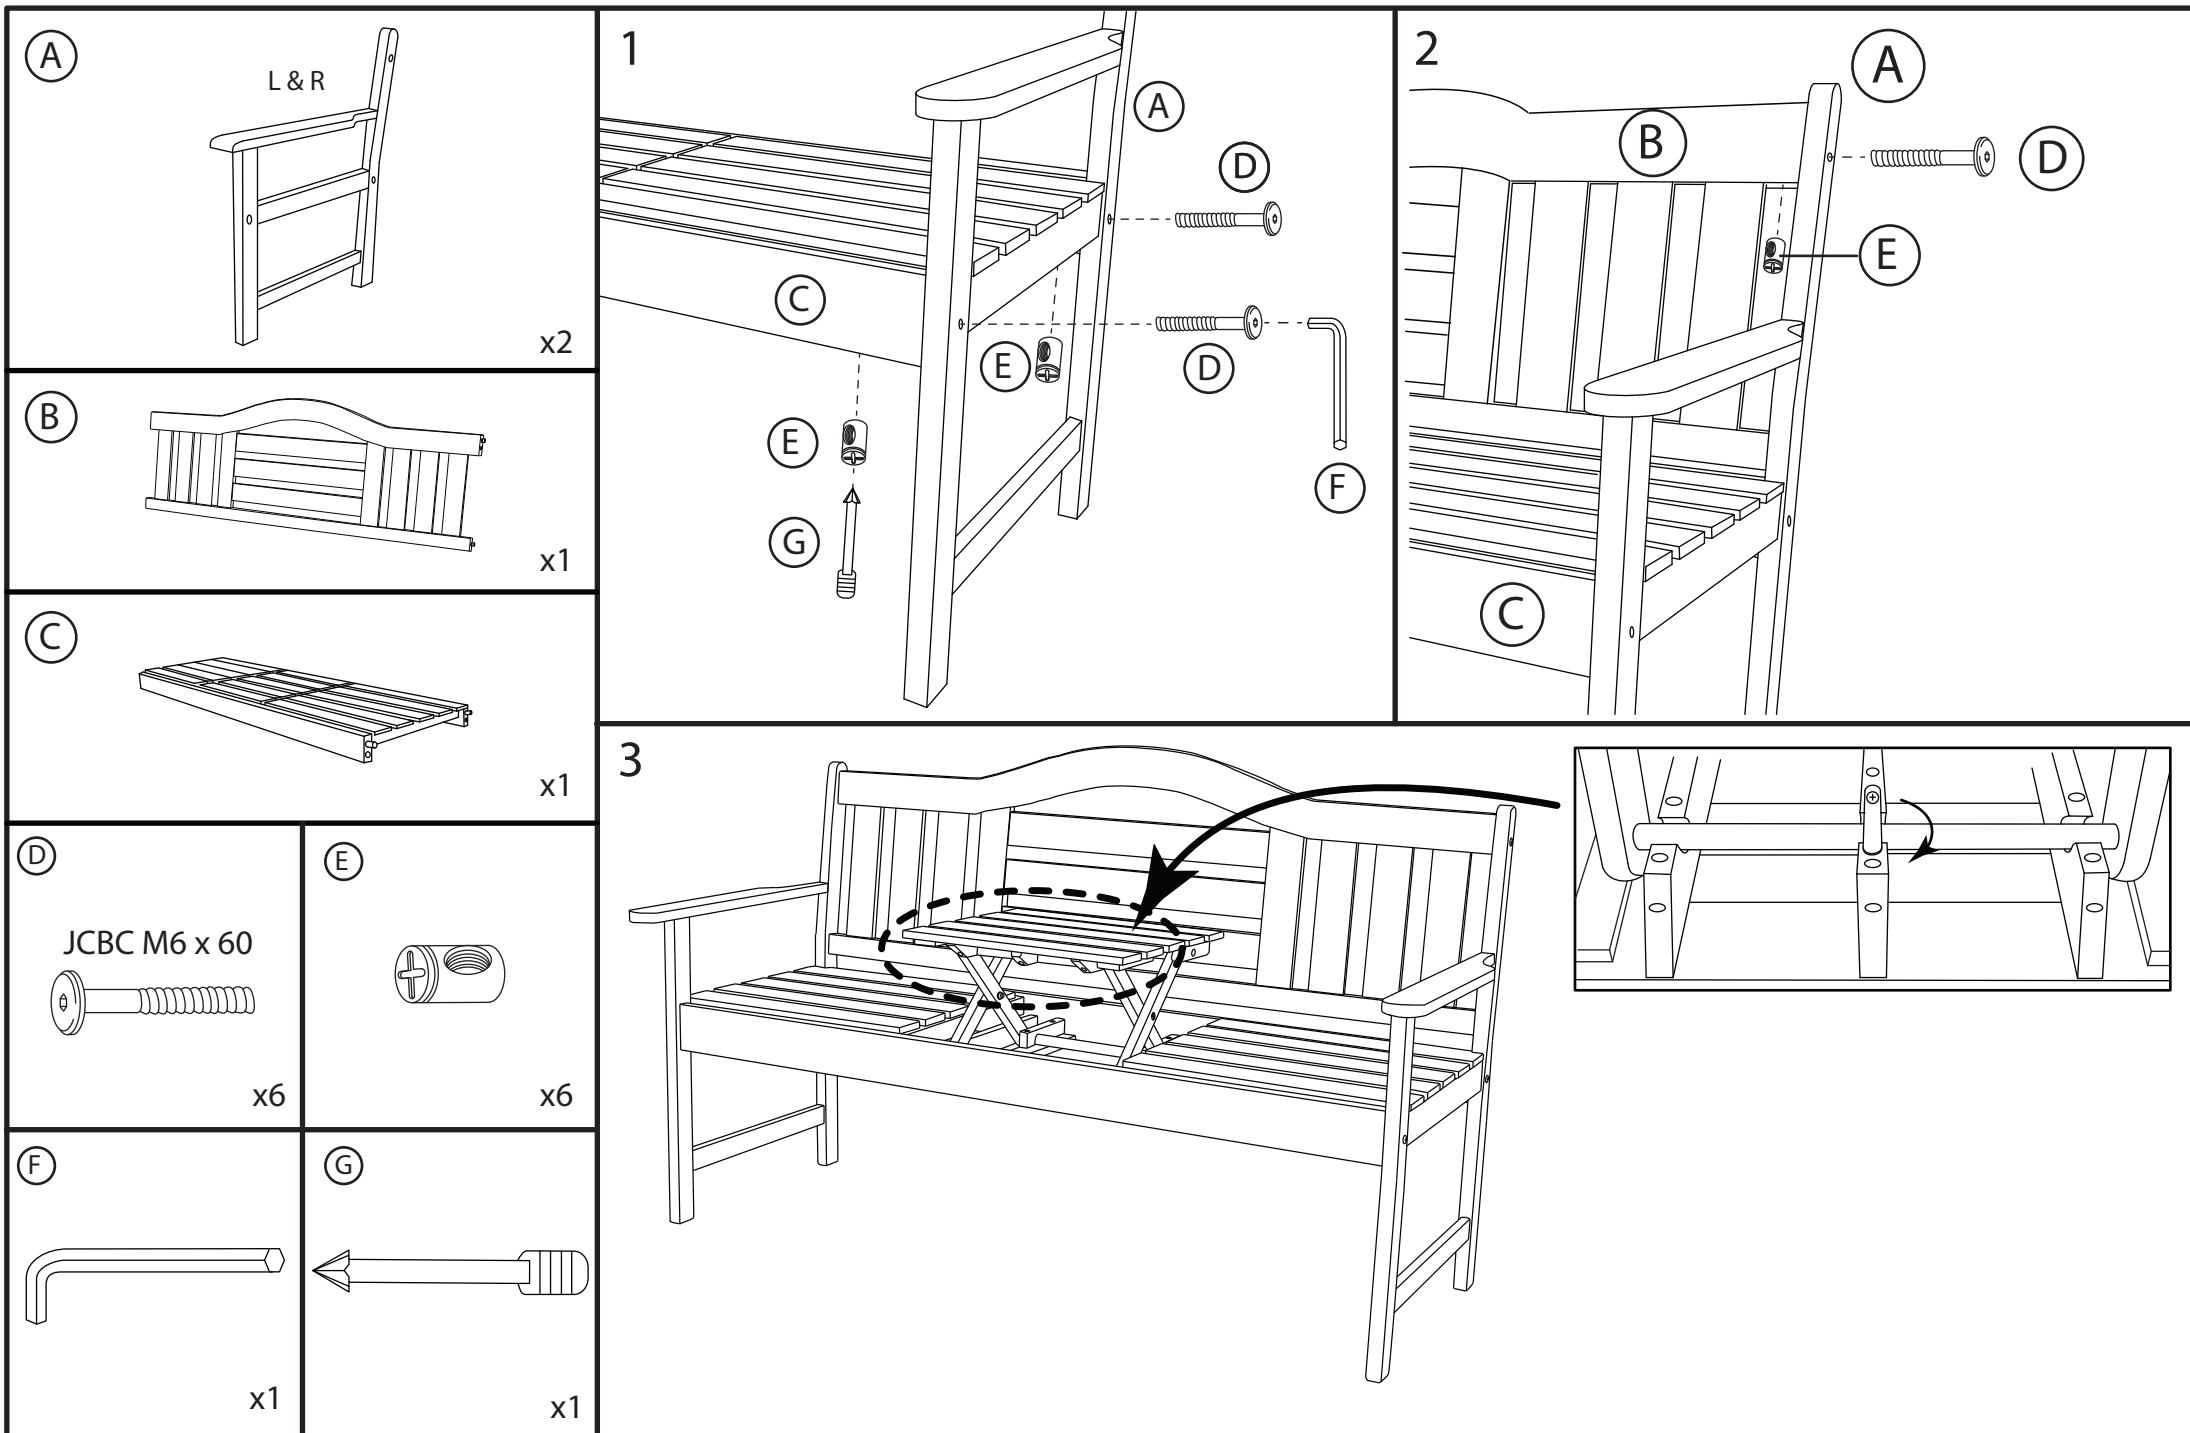

* DO NOT FULLY FASTEN BOLTS AND NUTS UNTIL ALL PARTS ARE COMPLETELY ASSEMBLED